











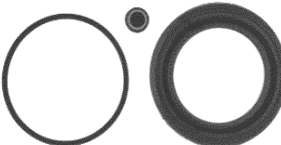


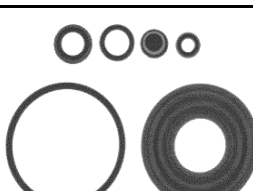





Dkm	Położenie	Zastosowanie	numer zamiennika	średnica tłoczka (mm)	Zdjęcie
B200001	Tył	B190033L / B190033R / B190035L / B190035R / B190166L / B190166R / B190170L / B190170R / B190251R / B190251L / B190254L / B190254R / B190021L / B190021R	114-0001	38	
B200002	Przód	B190241L / B190241R	114-0002	54	
B200003	Przód	B190248L / B190248R	114-0003	54	
B200004	Tył	B190261L / B190261R / B190029L / B190029R	114-0004	41	
B200005	Tył	B190144L / B190144R / B190244L / B190244R / B190122L / B190122R / B190124L / B190124R	114-0007	38	
B200006	Tył	B190085L / B190085R / B190255L / B190255R	114-0008	38	
B200007	Przód	B190120L / B190120R	114-0009	60	
B200008	Przód	B190108L / B190108R / B190111L / B190111R / B190260L / B190260R	114-0011	57	

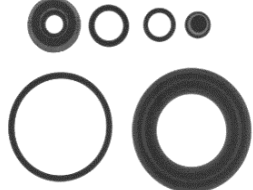Dkm	Położenie	Zastosowanie	numer zamiennika	średnica tarczka (mm)	Zdjęcie
B200009	Przód	B190239L / B190239R	114-0012	57	
B200010	Przód	B190236L / B190236R	114-0013	57	
B200011	Przód	B190253L / B190253R / B190152L / B190152R	114-0014	54	
B200012	Przód	B190247L / B190247R	114-0018	52	
B200013	Tył	B190076R / B190076L	114-0019	38	
B200014	Tył	B190047L / B190047R / B190087L / B190087R / B190154L / B190154R	114-0020	34	
B200015	Tył	B190041L / B190041R / B190079R / B190079L / B190039L / B190039R	114-0021	38	
B200016	Tył	B190272L / B190272R	114-0024	38	

Dkm	Położenie	Zastosowanie	numer zamiennika	średnica tłoczka (mm)	Zdjęcie
B200017	Tył	B190102R / B190102L / B190104L / B190104R / B190242L / B190242R / B190103R / B190103L	114-0025	38	
B200018	Tył	B190075L / B190075R / B190095L / B190095R / B190003L / B190003R / B190001L / B190001R	114-0026	41	
B200019	Tył	B190266L / B190266R	114-0029	38	
B200020	Tył	B190269L / B190269R / B190140L / B190140R / B190136L / B190136R	114-0030	34	
B200021	Tył	B190054R / B190054L	114-0032	34	
B200022	Tył	B190107L / B190107R / B190172L / B190172R	114-0034	41	
B200023	Przód	B190237L / B190237R	114-0038	57	
B200024	Tył	B190156L / B190156R / B190259L / B190259R	114-0041	36	

Dkm	Położenie	Zastosowanie	numer zamiennika	średnica tłocznka (mm)	Zdjęcie
B200025	Przód	B190150L / B190150R	114-0042	43	
B200026	Przód	B190138L / B190138R	114-0043	60	
B200027	Tył	B190146L / B190146R / B190265L / B190265R	114-0053	38	
B200028	Tył	B190256L / B190256R	114-0057	42	
B200029	Tył	B190162L / B190162R	114-0060	34	
B200030	Tył	B190069L / B190069R	114-0069	34	
B200031	Tył	B190264L / B190265R	114-0070	35	
B200032	Tył	B190243L / B190243R	114-0071	36	

Dkm	Położenie	Zastosowanie	numer zamiennika	średnica tarczka (mm)	Zdjęcie
B200033	Tył	B190142L / B190142R / B190271L / B190271R	114-0073	38	
B200034	Tył	B190249L / B190249R	114-0074	40	
B200035	Tył	B190174L / B190174R	114-0080	44	
B200036	Przód	B190106L / B190106R	114-0056	54	